

NETAVIS Observer Quick Install

1. Download

Please download the required ISO-Image from our website. After that burn the ISO file as image on CD / DVD; please refer to your CD / DVD writer manual for further instructions. If you need free burning software, please refer to <http://www.imgburn.com>.

2. Bios Settings

Please insert your NETAVIS Observer installation CD / DVD in the CD / DVD-ROM drive of your server and activate in the BIOS of your server, the option „Boot from CD / DVD-ROM“. Please check that date and time in your BIOS is correct. We recommend to use UTC time (<http://en.wikipedia.org/wiki/UTC>).

Please note: Your server will be installed from scratch. Observer already includes a professional Linux operating system in the package. Please be aware that there are no important data on the server, during the installation process the HDD will be partitioned and formatted.

Please use the right software version for your hardware – NETAVIS is available in the below-mentioned versions:

- NETAVIS Observer 32 Bit Version
- NETAVIS Observer 64 Bit Version

3. Installation Menu

When your server boots from CD / DVD, our install menu will appear. Please type „Install“ and press „Enter“.

4. Installation Steps

Navigation

In order to move between the menus please use the TAB-key; to activate a single option use the SPACE-Key.

Date and time

If you have set the BIOS CMOS time to GMT (UTC) then activate System clock uses UTC by pressing the SPACE bar. Otherwise you need not to activate this checkbox. Note: UTC time is recommended.

Client-on-Server

If you want to install the client and server application on the same machine, you have to proceed as follows: Please answer the question "Do you want the client to start automatically [N]:" with "yes". After successful installation you can switch with the keys CTRL+ALT+F1 or F2 or F3 between the different consoles.

Server and client data

Type in the required server and client data as required and write it down. Please note: If you change hardware or customer data you will need a new license key.

Finalization of the installation

Finish the installation with (0) Finalize Installation.

Default IP address and licensing

If you do not change the IP address of your server, it will have the default IP address 192.168.100.100. Type in the IP address in the browser of your client PC and create a valid software ID. Please send us data like number of users and cameras, release and ID with our order form to order@netavis.net . We will send you, after receiving the order form, ASAP a valid license key.

Manuals

For further details please refer to our manuals in our partner are or on <http://showroom.netavis.net/documentation.jsp>